

Villas of Lake Destiny

Irrigation System Main Shutoff Valves

There are two irrigation system shutoff valves for the Villas Irrigation system.

1. The **Main Shutoff** between units #123 and #125 on the backflow preventer is for the majority of the Villas Irrigation System.
2. A **Second Shutoff** is for the irrigation at the first building on the West Entrance to the Villas (Units #100 thru 108)

Occasionally while the irrigation system will spring a leak due to a broken pipe or sprinkler head and will gush water out of the ground. To turn the water off until repairs are made please shut off the relevant valves.

Main Shutoff Location

The Main Water irrigation cutoff for the villas between Units #123 and 125 on the backflow preventer in the bushes near the street. Raising either of the two blue handles into a vertical position will turn off the water to most of the irrigation system (All but the small piece near the West Entrance).

The blue handles are sometimes hard to turn so there is a white piece of plastic pipe you can put over the end of the handle to give you a little more leverage.

Image 1 – Shutoff Valves at the Backflow Preventer in the OFF position



Villas of Lake Destiny

Irrigation System Main Shutoff Valves

Second Shutoff

The Second Shutoff is for irrigation around the West Entrance and the first building at the West Entrance (Starting with Unit 100). On the side of the building next to Unit #100 is a green plastic cover that has access to the shutoff valve for that part of the system.

Image 2 – Location of the West Irrigation Shutoff Valve near Unit #100



Villas of Lake Destiny

Irrigation System Main Shutoff Valves

Image 3 – West Side Irrigation Valve shutoff in the OFF position

